



MusiBaby M1 Portable Party Speaker User Guide

[Home](#) » [MusiBaby](#) » MusiBaby M1 Portable Party Speaker User Guide 

Contents


- [1 MusiBaby M1 Portable Party Speaker](#)
- [2 Button Configuration](#)
- [3 How to Use](#)
- [4 How to Enter Exit Single Pairing](#)
- [5 How to Enter/Exit Stereo Pairing](#)
- [6 Package Contents](#)
- [7 Specifications](#)
- [8 Care & Maintenance](#)
- [9 FCC](#)
- [10 Documents / Resources](#)


MusiBaby

MusiBaby M1 Portable Party Speaker



Button Configuration

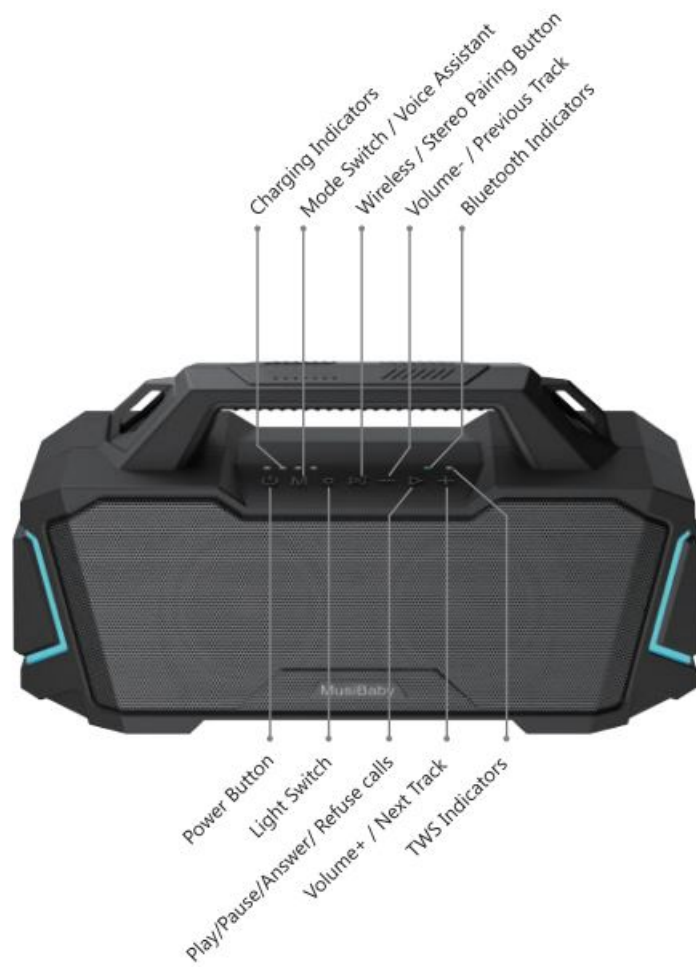

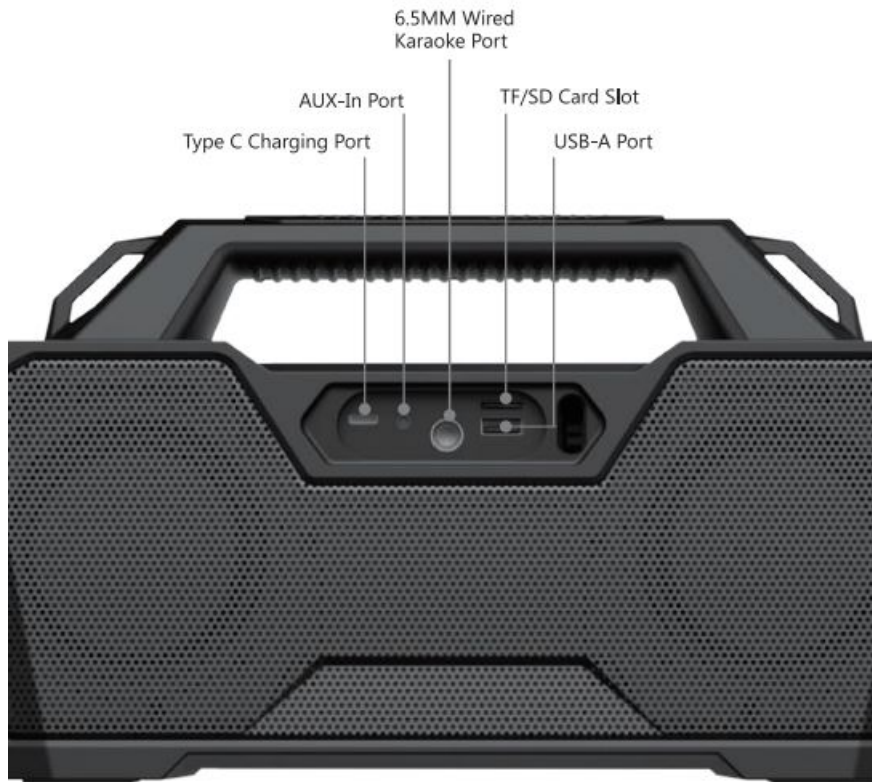

How to Use





How to Enter Exit Single Pairing

1. Turn on the Bluetooth speaker, if can't find the device name on cellphone. pls Press Once " D " to enter Single pairing mode.
2. Then Active the Bluetooth of your phone and search for "MusiBaby M1". Click manually to connect.
3. When you want to exit the wireless connection, press once " " to exit the single pairing mode.





How to Enter/Exit Stereo Pairing

1. Turn on two speakers and make sure they haven't connected with any device.
2. Press "D" for 25 on either speaker (Host Speaker) to enter stereo pairing mode.
3. Then Active the Bluetooth of your phone and search for "MusiBaby M1". Click manually to connect.
4. When you want to exit stereo pairing, press " " for 2S on either speaker to exit the stereo pairing mode.

Thank you for purchasing the MusiBaby M1 Portable Outdoor Speaker. Please read the user manual before use and keep it handy for future reference. If you have any additional questions or comments, please feel free to contact us.

Package Contents

- 1 x Portable Outdoor Speaker
- 1 x 3.5mm Audio Cable
- 1 x Type-C Charging Cable
- 1 x User Manual

USB-A Power Bank Function

- This speaker carries a USB charge-out function that will automatically detect your device and begin to charge it when the charging cable is plugged into the USB-A port under powering-on mode. The maximum charging time for other mobile devices is 30 minutes after each boot.

Aux-in Mode

- Simply connect the speaker with your non-Bluetooth device via the 3.5 mm audio jack cable.
 - **Note:** After plugging in an audio cable, the speaker will automatically switch to Aux-in mode.

TF Card Slot Mode

- The speaker will play the music from your TF/Micro SD card when plugging the card into the slot.

USB Flash Drive Mode

- The speaker will play the music from your U-disk when plugging into the slot.

Auto Power off

1. There is no operation after startup, and it will automatically shut down in 30 minutes.
2. When on low battery
3. After charging the device for 30 minutes, the speaker will also automatically power off

Wired Karaoke function

- The speaker is plugged into a 6.5mm wired microphone and can be used directly with the Karaoke function when switched on and connected to wireless

Specifications

| | |
|-------------------|----------------------|
| Model | M, |
| Color | Black |
| Bluetooth Version | S., |
| Frequen cy Range | 65Hz-20KHz |
| Inpu t Power | 5V12A via Type.C Pon |
| Driver | 4() |
| ChargingTime | “”o’ 5 Hours |

Care & Maintenance

- Do not use any form of detergents or cleaning material to clean the product as any type of chemical may make this device unusable.
- Do not disassemble this product. It contains no user-serviceable parts.
- Do not drop or jump on it and treat it with care for the best performance.
- Keep the product in a dry location. Dust, dirt & moisture from humidity can accumulate on the body of the product if kept at an unfriendly place.
- Do not dispose of this product in a fire or the batteries may explode or leak.

FCC

FCC Statement

This device complies with part 15 of the FCC rules. Operation is subject to the following two conditions

1. this device may not cause harmful interference, and
2. this device must accept any interference received, including interference that may cause undesired operation.


Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment to an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

RF Warning Statement:

The device has been evaluated to meet general RF exposure requirements. The device can be used in portable exposure conditions without restriction.

Documents / Resources

| | |
|---|---|
|  | <p>MusiBaby M1 Portable Party Speaker [pdf] User Guide 2APEI-M1, 2APEIM1, M1, M1 Portable Party Speaker, Portable Party Speaker, Party Speaker, Speaker</p> |
|---|---|